

Wattage and Amps

Power Setting	Wattage Setting		
Max/Sear	600W 5 Amps	900W 7.5 Amps	1,500W 12.5 Amps

Based on line voltages registering 120V.

Changing Wattage Setting

The PIC Gold operates at a default of 1500 watts. If you use the PIC Gold in a location with limited wattage, you can adjust the PIC Gold's wattage by pressing **Watts** until you reach the desired wattage.

When Cooking at lower wattages, your cooking time may increase slightly.

Quick Start

- Press **Start** the display will then show a temperature of **375F/193C** and default cook for 1 hour.

Pause

- Press **Pause Clear** once to pause cooking. Display will clear after 45 minutes.

Resume

- Press **Start** to resume cooking.

Stop

- Press **Pause Clear** twice to clear.

Changing Fahrenheit to Celsius

- Press **Prog** once.
- Press **+** once to display Fahrenheit.
- Press **-** again to display Celsius.
- Press **Pause Clear** to finish.

Adjust Cooking Temperature

Increase/decrease the temperature manually by selecting 1 of the 6 temperature settings, or by pressing **+** or **-** to adjust the temperature by 10-degree increments.

Easy Temperature Settings

Press Button	Range Temperature	Examples
Low	100°F (38°C)	Warm
Med/Low	175°F (79°C)	Simmer
Med	275°F (135°C)	Steam
Med/High	375°F (191°C)	Stir/Deep Fry
High	425°F (218°C)	Boil/Saute
Max/Sear	575°F (302°C)	Sear

Changing Cooking Time While Cooking

To cook for a specific time or longer than 1 hour. **Ex: 3 hours and 45 minutes.**

- Press **Time** twice to set column one, then press **+** 5 times to set for 5 minutes.

Step 1

00:05

- Press **Time** again to set column two, then press **+** 4 times to set for 4 minutes.

Step 2

00:45

- Press **Time** again to set column three, then press **+** 3 times to set for 3 hours.

Step 3

03:45

The flashing digit is the number being altered.

Stage/Programming Cooking

Program the PIC to cook at different temperatures for different amounts of time. **Ex: High for 5 Min. then Low for 3 Min.**


- Press **Prog** to set the stages.
- Press **High** then press **Time** and then press **+** 5 times for 5 minutes at High.
- Press **Low** then press **Time** and then press **+** 3 times for 3 minutes at Low.
- Press **Start** to begin cooking.

You can add additional stages by just repeating steps 2 or 3 with your desired temperature and time before pressing **Start**.

Delay Cooking

How to program the PIC to delay cooking. **Ex: Delay cooking for 6 minutes, then cook on High for 3 minutes.**

- Press **Prog** to set the delay.
- Press **Time** then press **+** 6 times to delay for 6 minutes.
- Press **Prog** then press **High**. Press **Time** and then press **+** 3 times to cook for 3 minutes.
- Press **Start** to begin cooking.

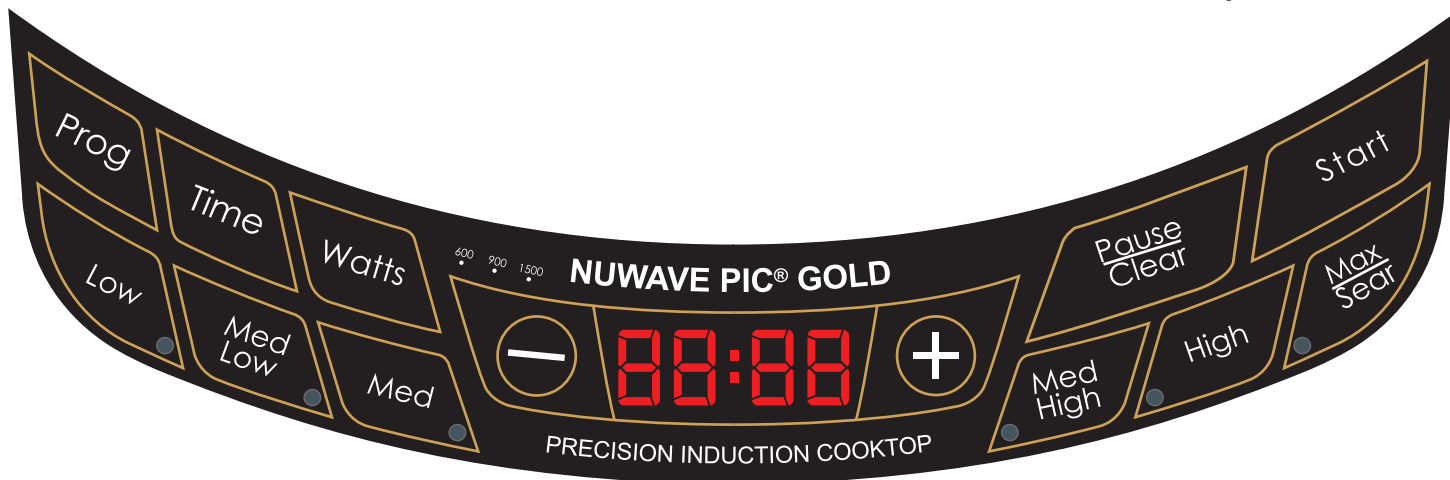

Potencia en Watts y Amps

Potencia	Watts		
Max/Sear	600W 5 Amps	900W 7.5 Amps	1,500W 12.5 Amps

Basadas en líneas de voltaje de 120V.

Para cambiar los Watts

El PIC Gold funciona automáticamente en 1500 watts. Si usted lo utiliza en un lugar con watts limitados puede ajustarlo presionando **Watts** hasta encontrar los watts deseados.

Si cocina con menos watts, el tiempo deberá incrementarse un poco.

Inicio Rápido

- Presione **Start** y se mostrará una temperatura de 375°F/191°C y cocinará automáticamente por 1 hora.

Pausa

- Presione **Pause Clear** una vez para pausar. La pantalla se borrará después de 45 minutos.

Resume

- Presione **Start** para reanudar.

Detener

- Presione **Pause Clear** dos veces para detener.

Para cambiar de Fahrenheit a Celsius

- Presione **Prog** una vez.
- Presione **+** una vez para mostrar Fahrenheit.
- Presione **+** otra vez para mostrar Celsius.
- Presione **Pause Clear** Para finalizar.

Ajuste de la Temperatura

Incremente/reduzca la temperatura manualmente, eligiendo 1 de los 6 niveles de temperatura o presionando **+** o **-** para ajustar la temperatura en incrementos de 10 grados.

Programación Fácil de la Temperatura

Presione el Botón	Temperatura	Ejemplos
Low	100°F (38°C)	Tibio
Med/Low	175°F (79°C)	Fuego Lento
Med	275°F (135°C)	Vapor
Med/High	375°F (191°C)	Mezclar/Freir
High	425°F (218°C)	Hervir/Saltear
Max/Sear	575°F (302°C)	Dorar

Para cambiar el Tiempo Mientras Cocina

Para cocinar por un tiempo específico o más de una hora. Ej: 3 horas y 45 minutos.

1. Presione **Time** dos veces para programar la primera columna, luego presione **+** 5 veces para programar 5 minutos.

Paso 1
00:05

2. Presione **Time** otra vez para programar la segunda columna, luego presione **+** 4 veces para programar 4 minutos.

Paso 2
00:45

3. Presione **Time** otra vez para programar la tercera columna, luego presione **+** 3 veces para programar 3 horas.

Paso 3
03:45

El dígito intermitente será el número alterado.

Cocinar por Etapas / Programación

Programa el PIC para cocinar en diferentes temperaturas por diferentes lapsos de tiempo. Ej: High por 5 Min. luego Low por 3 Min.

1. Presione **Prog** para programar las etapas.
2. Presione **High** luego presione **Time** y luego presione **+** 5 veces por 5 minutos en High.
3. Presione **Low** luego presione **Time** y luego presione **+** 3 veces por 3 minutos en Low.
4. Presione **Start** para comenzar a cocinar.

Puede añadir etapas adicionales tan sólo repitiendo los pasos 2 ó 3 con sus temperaturas y tiempos deseados antes de presionar **Start**.

Demorar el cocinado

Cómo programar el PIC para demorar el cocinado. Ej: Demorar por 6 minutos, luego cocinar en High por 3 minutos.

1. Presione **Prog** para programar la demora.
2. Presione **Time** luego presione **+** 6 veces para demorar por 6 minutos.
3. Presione **Prog** luego presione **High**. Presione **Time** y luego presione **+** 3 veces para **+** cocinar por 3 minutos.
4. Presione **Start** para comenzar a cocinar.